



US - english

---

## Instructions for installation and operation

### Leak Detector **METPOINT® LKD**



---

Dear customer,

Thank you for deciding in favour of the METPOINT LKD leak detector. Please read these operating instructions carefully before starting up the METPOINT LKD and follow our directions. Perfect functioning of the METPOINT LKD and safe operation can only be guaranteed when the provisions and notes stipulated here are strictly adhered to.

1	Safety instructions	4
2	Field of application	5
3	Special advantages	5
4	Technical data	6
5	Accessories in the scope of delivery	6
6	Operating principle	8
7	Savings potential in compressed-air plants	8
8	Control elements and display METPOINT LKD	9
9	Start-up of the leak detector	10
9.1	Switching-on	10
9.2	Adjusting the sensitivity	10
9.3	Adjusting the loudness level	10
9.4	State of charge/charging	10
9.5	Switching-off	10
10	Employment	11
11	Cleaning	11
12	Declaration of Conformity	12

### 1 Safety instructions



**Please check whether or not these instructions correspond to the device type.**

Please adhere to all advice given in these operating instructions. They include essential information which must be observed during operation. Therefore, it must be ensured that these operating instructions are read by the fitter /user and the responsible operator / certified skilled personnel prior to the start-up.

The operating instructions must be accessible at all times at the place of application of the METPOINT LKD.

In addition to these operating instructions, local and national regulations need to be observed, where required.

If you have any queries regarding these operating instructions or the device, please contact BEKO TECHNOLOGIES.



**Danger!**

**Compressed air!**

**Risk of serious injury or death through contact with quickly or suddenly escaping compressed air or through bursting plant components.**

**Measures:**

- Make sure that persons or objects cannot be hit by escaping compressed air!



**Danger!**

**Supply voltage!**

**There is the risk of an electric shock involving injury or death when coming into contact with non-insulated components carrying supply voltage.**

**Measures:**

- During electric installations, all regulations in force need to be adhered to (e.g. VDE 0100)!
- **Do not open the housing of the METPOINT LKD and of the power pack!**
- All types of electrical work must be carried out by authorised and skilled personnel only.



**Danger!**

**Reduced exterior noises!**

**When using the headphones, ambient noise levels are reduced. This can lead to accidents as, for example, approaching lorries may not be heard. There is an increased accident hazard involving injury or death.**

**Measures:**

- Pay attention to your environment.
- Have a look around at regular intervals.
- Take off the headphones from time to time and pay attention to noises in your vicinity.

### Further safety instructions:

- During operation, the national regulations and safety instructions in force also need to be observed.
- The leak detector must not be employed in hazardous areas.



### Caution!

#### Malfunctions of the METPOINT LKD

Incorrect handling and improper transport can lead to malfunctions of the METPOINT LKD which may impair the function and lead to misinterpretations.

## 2 Field of application


- The METPOINT LKD is a leak detector for the detection of leakages and leaks in compressed-air and vacuum systems.
- With the METPOINT LKD, leaks and leakages can be detected. The measurement of the escaping amount of gas is not possible with the METPOINT LKD.
- In vacuum systems, only leakages can be detected. Leaks caused by diffusion cannot be detected with the METPOINT.

## 3 Special advantages

- Easy handling and operation.
- An external receiver facilitates the detection of leakages even at places which are difficult to access.
- Separate control of sensitivity and loudness level.
- Very luminous and very legible OLED display.
- Headphones with attenuation of the ambient noises (approximately 20dB).

## Technical data

### 4 Technical data

	
<b>METPOINT LKD</b>	
Measuring range	40 kHz +/- 1 kHz
Frequency range	2.5 kHz
Visual display	OLED display: Signal leakage (analogue pointer deflection) Sensitivity: bargraph and percentage indication Loudness level: bargraph and percentage indication State of charge: multi-stage
Signal level indicator	Digital pointer deflection and percentage indication
Sensitivity	0 to 100% adjustable
Headphones output	0.14 Inch jack bush
Loudness level headphones	Adjustable 10 steps
Voltage supply	3.7V Li-ion rechargeable battery with 1100 mAh
Charging time	2.5h
Battery life	> 40 h
State of charge indication	Multi-stage
Weight	Approximately 8.8 ounces
Housing	Aluminium
Dimensions	4.72 x 2.76 x 0.91 Inch
Operating temperatures	-4°F to +140°F
Keyboard	Membrane IP51 (resistant to oils etc.)
Interface	USB (updatable)

<b>Power pack</b>	
Input voltage	90 ... 264 VAC
Input frequency	47 ... 63 Hz
Power	5 watt
Output voltage	5 VDC
Operating temperature	32°F ... +104°F
Storage temperature	-40°F ... +185°F
Dimensions	2.82 x 1.77 x 1.17 Inch
Weight	2.1 ounces
Connecting plug	Mini USB type B

### 5 Accessories in the scope of delivery

The following table shows all products included in the scope of delivery of the METPOINT LKD. In the event of loss or damage, the individual parts can be reordered.

METPOINT LKD	Leak detector with display
External sensor	Sensor for detection, including cable

## Accessories in the scope of delivery

Headphones	Headphones with sound insulation against exterior noises (approx. 20 dB damping), incl. connecting cable with 0.14 Inch jack plug
Power pack	External power supply plug to charge the METPOINT LKD, incl. adapter for worldwide employment
USB cable	For connection to a PC. METPOINT LKD can be charged via the USB connection.
Car adapter	Adapter for the connection to the 12V car battery (via cigarette lighter)
Shipping case	Serves to protect the METPOINT LKD during the transport

## **Operating principle**

---

### **6 Operating principle**

When compressed air escapes into the ambient air via a leak, ultrasonic waves develop at the leak. This ultrasound cannot be perceived by the human ear.

The METPOINT LKD leak detector makes use of this fact. The developing ultrasound is picked up via the external sensor. The electronics in the METPOINT LKD evaluate the intensity of the ultrasound and indicates the result as a pointer deflection on the display. In addition, the ultrasound is internally converted into audible frequencies. You can hear the result in the headphones.


During localisation, it is advisable to always work with the combination of display and headphones.

### **7 Savings potential in compressed-air plants**

In many companies, compressed-air systems exist with leaks in ducts, couplings and hoses (leakages of 30% and more are not uncommon). This results in significant costs for the company. Moreover, additional unnecessary maintenance measures are required for the compressor and the compressed-air processing.



## Control elements and display METPOINT LKD

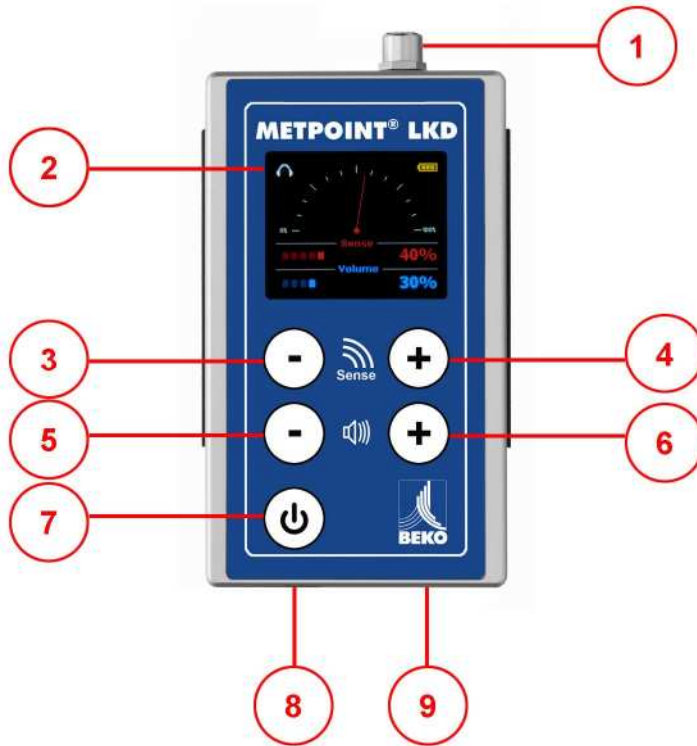

1. Connection external sensor
2. OLED display
3. Button sensitivity -
4. Button sensitivity +
5. Button loudness level -
6. Button loudness level +
7. On/off button
8. Headphone connection 0.14 Inch jack
9. Power pack connection Mini USB type B



1. Battery status indication
2. Analogue pointer (detection result)
3. Bargraph adjusted sensitivity
4. Percentage adjusted sensitivity
5. Bargraph adjusted loudness level
6. Percentage adjusted loudness level

## Start-up of the leak detector

---

### 8 Start-up of the leak detector

#### 8.1 Switching-on

To switch on the device, press the on/off button.

During the starting process, the software version is indicated in the upper left corner of the display.

#### 8.2 Adjusting the sensitivity

By pressing the sensitivity + and sensitivity – buttons, the sensitivity can be adjusted, depending on the strength of the received signal (leak).

On the display, you can see the respective sensitivity setting as a bargraph and as a percentage indication.

The pointer deflection depends on the adjusted sensitivity and the intensity of the received ultrasound signal (of the leakage).

It is advisable to start with the highest sensitivity setting and to reduce sensitivity the more you approach the leakage.




#### 8.3 Adjusting the loudness level

Via the loudness level – and loudness level + buttons, the loudness of the headphone output can be adjusted.

On the display, you can see the respective loudness setting as a bargraph and as a percentage indication.

#### 8.4 State of charge/charging

In the upper right corner of the display, you can find the battery indicator. It shows the state of charge of the rechargeable battery.

	Battery status 100%
	Battery status 50%
	Battery status approx. 10%: please recharge soon.

To charge the battery, please connect the supplied power pack with the power pack connection of the METPOINT LKD.

The charging process is terminated as soon as three bars reappear on the display.



**Note:**

Please charge the device from time to time to ensure the perfect functioning of the device.

#### 8.5 Switching-off

To switch off the device, press the on/off button.

---

## **9 Employment**

Start up the METPOINT LKD. Subsequent to switching it on, the device is serviceable within a short period of time.

A basic sensitivity and loudness is preset when the device is switched on.

Now direct the external sensor to the zone you want to check.

It is advisable to start with the highest sensitivity setting and to reduce sensitivity the more you approach the leakage.

By directing the external sensor to an existing leakage, the deflection of the pointer is indicated on the OLED display.

In addition, the intensity and the adjusted loudness levels are visualised via a bargraph indication.

The headphones also offer the possibility to detect a leakage without the need to continuously keep the display in view.

The sensitivity of the sensor and the loudness level of the headphone signal can be controlled independently of each other via the corresponding "+" and "-" buttons.

By combining both functions, leakages can be detected quickly and easily.

## **10 Cleaning**

The surfaces of the METPOINT LKD are resistant to dust, oils and similar contaminations.

You can use a damp cloth for cleaning, to remove gross contaminations.

Please do not use aggressive, alcoholic or caustic cleaning agents. These may affect and damage the surfaces.

## 11 Declaration of Conformity

BEKO TECHNOLOGIES GMBH  
41468 Neuss, GERMANY  
Tel: +49 2131 988-0  
www.beko-technologies.de



### EG-Konformitätserklärung

Wir erklären hiermit, dass die nachfolgend bezeichneten Produkte den Anforderungen der einschlägigen Richtlinien und technischen Normen entsprechen. Diese Erklärung bezieht sich nur auf die Produkte in dem Zustand, in dem sie von uns in Verkehr gebracht wurden. Nicht vom Hersteller angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt.

Produktbezeichnung:	Leckage-Detektor
Modelle:	METPOINT LKD
Betriebsspannung:	5 VDC
Produktbeschreibung und Funktion:	Detektor zur Erkennung von Leckagen und Undichtigkeiten an Druckluft- und Vakuumsystemen.

**EMV-Richtlinie 2004/108/EG**  
Angewandte Normen:

EN 61326-1:2006  
EN 55011:2007 (Gruppe 1, Klasse B)

Neuss, 13.09.2011

BEKO TECHNOLOGIES GMBH

  
i.V. Christian Riedel  
Leiter Qualitätsmanagement

**BEKO TECHNOLOGIES GMBH**  
41468 Neuss, GERMANY  
Phone: +49 2131 988-0  
www.beko.de



## EC Declaration of Conformity

We hereby declare that the products indicated hereafter comply with the stipulations of the relevant directives and technical standards. This declaration only refers to products in the condition in which they have been placed into circulation. Parts which have not been installed by the manufacturer and/or modifications which have been implemented subsequently remain unconsidered.

Product designation:	Leak detector
Types:	METPOINT LKD
Operating voltage:	5 VDC
Product description and function:	Detector for the detection of leakages and leaks in compressed-air and vacuum systems.

<b>EMC Directive 2004/108/EC</b>	
Standards applied:	EN 61326-1:2006 EN 55011:2007 (Group 1, Class B)

Neuss, 13 September 2011

**BEKO TECHNOLOGIES GMBH**

p.p. Christian Riedel  
Head of Quality Department

<b>A</b>		<b>K</b>	
Accessories .....	6	Keyboard.....	6
<b>B</b>		<b>L</b>	
Battery life.....	6	Loudness level headphones.....	6
<b>C</b>		<b>M</b>	
Charging time .....	6	Measuring range.....	6
Cleaning.....	11	<b>O</b>	
Control elements and display .....	9	Operating principle.....	8
<b>D</b>		Operating temperature.....	6
Danger compressed air .....	4	<b>S</b>	
Danger supply voltage.....	4	Safety instructions .....	4, 5
Declaration of Conformity.....	12	Sensitivity.....	6
Dimensions .....	6	Signal level indicator.....	6
<b>E</b>		Skilled personnel .....	4
Employment.....	11	Special advantages .....	5
<b>F</b>		State of charge indication .....	6
Field of application.....	5	<b>T</b>	
Frequency range .....	6	Technical data .....	6
<b>H</b>		<b>V</b>	
Headphone output.....	6	Visual display.....	6
Housing.....	6	Voltage supply .....	6
<b>I</b>		<b>W</b>	
Interface.....	6	Weight.....	6



**Headquarter :****Deutschland / Germany**

BEKO TECHNOLOGIES GMBH  
Im Taubental 7  
D-41468 Neuss  
Tel.: +49 (0)2131 988 0  
beko@beko.de

**中华人民共和国 / China**

BEKO TECHNOLOGIES (Shanghai) Co.  
Ltd.  
Rm.606 Tomson Commercial Building  
710 Dongfang Rd.  
Pudong Shanghai China  
P.C. 200122  
Tel. +86 21 508 158 85  
beko@beko.cn

**France**

BEKO TECHNOLOGIES S.à.r.l.  
Zone Industrielle  
1 Rue des Frères Rémy  
F- 57200 Sarreguemines  
Tél. +33 387 283 800  
Info.fr@beko.de

**India**

BEKO COMPRESSED AIR  
TECHNOLOGIES Pvt. Ltd.  
Plot No.43/1, CIEEP, Gandhi Nagar,  
Balanagar, Hyderabad - 500 037, INDIA  
Tel +91 40 23080275  
eric.purushotham@bekoindia.com

**Italia / Italy**

BEKO TECHNOLOGIES S.r.l  
Via Peano 86/88  
I - 10040 Leini (TO)  
Tel. +39 011 4500 576  
info.it@beko.de

**日本 / Japan**

BEKO TECHNOLOGIES K.K  
KEIHIN THINK 8 Floor  
1-1 Minamiwatarida-machi  
Kawasaki-ku, Kawasaki-shi  
JP-210-0855  
Tel. +81 44 328 76 01  
info@beko-technologies.co.jp

**Benelux**

BEKO TECHNOLOGIES B.V.  
Veenen 12  
NL - 4703 RB Roosendaal  
Tel. +31 165 320 300  
info@beko.nl

**Polska / Poland**

BEKO TECHNOLOGIES Sp. z o.o.  
ul. Chłapowskiego 47  
PL-02-787 Warszawa  
Tel +48 (0)22 855 30 95  
info.pl@beko.de

**Scandinavia**

www.beko-technologies.com

**España / Spain**

BEKO Tecnológica España S.L.  
Polígono Industrial "Armenteres"  
C./Primer de Maig, no.6  
E-08980 Sant Feliu de Llobregat  
Tel. +34 93 632 76 68  
info.es@beko.de

**South East Asia**

BEKO TECHNOLOGIES S.E.Asia  
(Thailand) Ltd.  
75/323 Romklao Road  
Sansab, Minburi  
Bangkok 10510  
Thailand  
Tel. +66 (0) 2-918-2477  
BEKO-info@beko-seasia.com

**臺灣 / Taiwan**

BEKO TECHNOLOGIES Co.,Ltd  
16F.-5, No.79, Sec. 1,  
Xintai 5th Rd., Xizhi Dist.,  
New Taipei City 221,  
Taiwan (R.O.C.)  
Tel. +886 2 8698 3998  
info@beko.com.tw

**Česká Republika / Czech Republic**

BEKO TECHNOLOGIES s.r.o.  
Mlýnská 1392  
CZ - 562 01 Usti nad Orlici  
Tel. +420 465 52 12 51  
info.cz@beko.de

**United Kingdom**

BEKO TECHNOLOGIES LTD.  
2 West Court  
Buntsford Park Road  
Bromsgrove  
GB-Worcestershire B60 3DX  
Tel. +44 1527 575 778  
Info.uk@beko.de

**USA**

BEKO TECHNOLOGIES CORP.  
900 Great SW Parkway  
US - Atlanta, GA 30336  
Tel. +1 (404) 924-6900  
beko@bekousa.com

Original instructions in US-English.

Subject to technical changes / errors excepted.

METPOINT\_LKD\_manual\_en\_USA\_2012-05